

Work Order	3223.1_Rev1
Setup-Code	181114-10290-2801-01



Test Report

JIS Z 2801:2012 (Mod)

Antimicrobial products – Test for antimicrobial activity and efficacy

Test Object:

*Coated Leneta-Foil versus Enterococcus hirae DSM3320
ATCC10541 after 1 month artificial aging*

Work Order	3223.1_Rev1
Setup-Code	181114-10290-2801-01

Report on Findings

Client: Decorative Products GmbH
Address: Kurt-Fischer-Str. 32
 22926 Ahrensburg

Work order no.: 3223.1_Rev1

Test object: Coated Leneta-foil versus *Enterococcus hirae* DSM3320 ATCC10541 after 1 month artificial aging

Sample description: coated foil

Date of receipt of sample: 2018-Oct-22

Type of test: JIS Z 2801:2012 Antimicrobial products – Test for antimicrobial activity and efficacy

Test Germ: *Enterococcus hirae* DSM3320 ATCC10541

Test laboratory: QualityLabs BT GmbH

Address: Neumeyerstrasse 46a
 90411 Nuremberg, Germany


Setup-Code: 181114-10290-2801-01

Sample material: n.b.

No. of pages in report: 7

Report on findings to the client: **Place and date of preparation:** Nuremberg, 2019-Jan-25
Recipient: Decorative Products GmbH
 Replaces the test report of the 16th of November 2018

Laboratory Director:

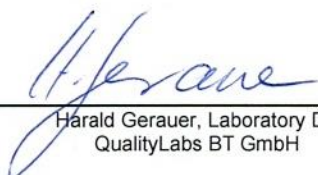

Harald Gerauer, Laboratory Director
 QualityLabs BT GmbH

Released:



Markus Zehe, Managing Director
 QualityLabs BT GmbH

Work Order	3223.1_Rev1
Setup-Code	181114-10290-2801-01

Declaration on Quality Assurance

This investigation was performed and supervised according to the standard operating procedure "SOP zu JIS Z 2801:2012 (Mod)" by QualityLabs BT GmbH. The laboratory and process are continually monitored by independent, external authorities, as well as by internal audits.

Archiving

A copy of the test report, a protocol of the measurement as well as the accompanying correspondence and business records are archived by QualityLabs BT GmbH. The retention period is at least 10 years.

Test description

Anti-bacterial activity is determined in accordance with a modified version of JIS Z 2801:2012.

During the test, a thin liquid-film containing the bacteria (1.25×10^4 CFU / cm²) is applied directly to the test sample (Standard: 5 cm x 5 cm). To avoid desiccation a foil (Standard: 4cm x 4cm, Stomacher Bags) is applied. Immediately after inoculation, the bacteria from the reference sample are separated from the sample and the enveloping foil surfaces using ultrasound and vortex devices and the number of viable germs (CFU – colony-forming units) is determined (t_0 value). A further set of reference samples and samples given anti-microbial treatment is incubated with bacteria in a liquid-film and the enveloping foil in a damp environment at 37°C. After 24 hours, the bacteria are separated from the sample surfaces using ultrasound and vortex devices and the number of viable germs is determined (t_{24} value).

Work Order	3223.1_Rev1
Setup-Code	181114-10290-2801-01

Assessment of antimicrobial activity

A logarithmic germ reduction of **≥ 3 log scales** of the antimicrobial sample in comparison to the respective reference is used as assessment criterion to pass the antimicrobial test.

Germ reduktion [log scales]	Antibacterial activity
< 3	Not sufficient antimicrobial activity
≥ 3	Sufficient antimicrobial activity

Work Order	3223.1_Rev1
Setup-Code	181114-10290-2801-01

References to Testconditions

Testconditions		
Sample size	25	cm ²
Foil size	16	cm ²
Volume Inoculum	400	μl
Sample cleaning	-	-

References to deviations, preincubations, special test conditions

The samples have been stored for 5 days at 50 °C, this equals an artificial aging of 1 month according to ASTM F 1980.

Work Order	3223.1_Rev1
Setup-Code	181114-10290-2801-01

Test Results

Sample Name	Sample Code	t_0 (cells/cm ²)	t_{24} (cells/cm ²)	Reduction [%]	Log Reduction Reference
1 Nullprobe	102902310180011	6.2 x 10 ⁴	5.2 x 10 ⁴	5.2 x 10 ⁴	6.8 x 10 ⁴
2 Airdal 2,9%	102902310180012		< 1.0 x 10 ¹	< 1.0 x 10 ¹	> 99.99

*see "Interpretation of Results", page 6

Test strain	<i>Enterococcus hirae</i> DSM3320 ATCC10541
Initial cell count inoculum / cm ²	1.25 x 10 ⁴
Initials of the editor	MZ
Measurement ended on	Nov-16-2018

Work Order	3223.1_Rev1
Setup-Code	181114-10290-2801-01


Comments on test objects

NONE

Interpretation of the results based on the measurements

NONE

Editor: Mr. Zehe 

Crosschecked: Mr. Gerauer 

References

JIS Z 2801:2012 Antimicrobial products – Test for antimicrobial activity and efficacy